DEALER SETUP FOR SNAPPER 32",36" & 48" COMMERCIAL MOWERS

SNAPPER POWER EQUIPMENT has made every effort to ensure that set-up and initial adjustments of their line of Commercial Mowers is as simple and straightforward as possible.

Instructions covering all aspects of set-up are listed below. Follow these steps in sequence for proper installation of the various components of the **SNAPPER COMMERCIAL MOWERS**.

A. FRONT CASTER WHEELS

1. Mount front Caster Wheel Assemblies, making certain the R.H. assembly is mounted using stud bolt for the optional grass catcher attachment. See Figure 1.

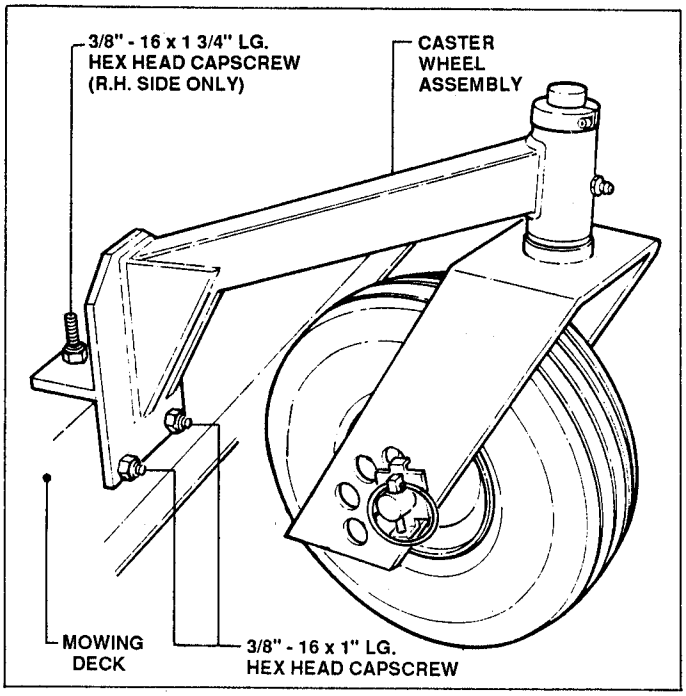

FIGURE 1

B. FUEL TANK

1. Install two (2) Fuel Tank Saddle Pads to the lower handle assembly. See Figure 2.

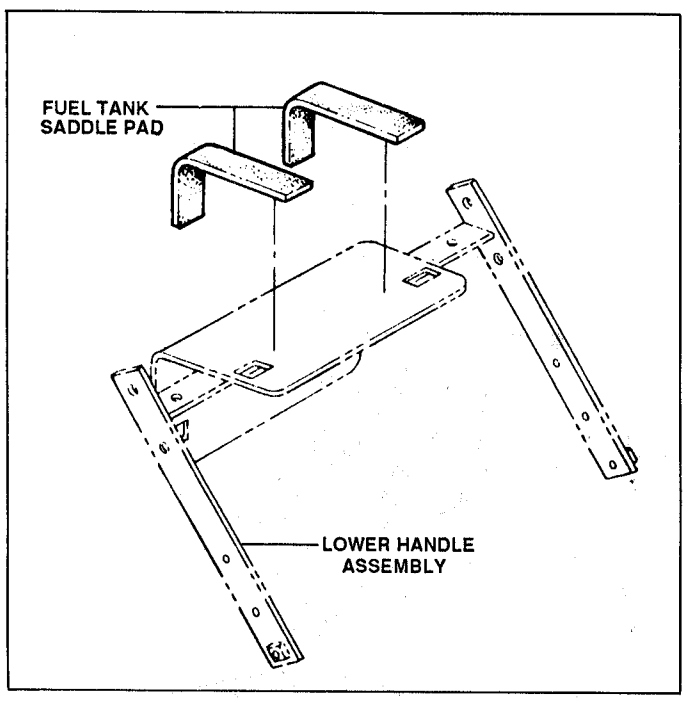

FIGURE 2

2. Assemble Fuel Line and components. Install Fuel Line Assembly to fuel tank. See Figure 3.

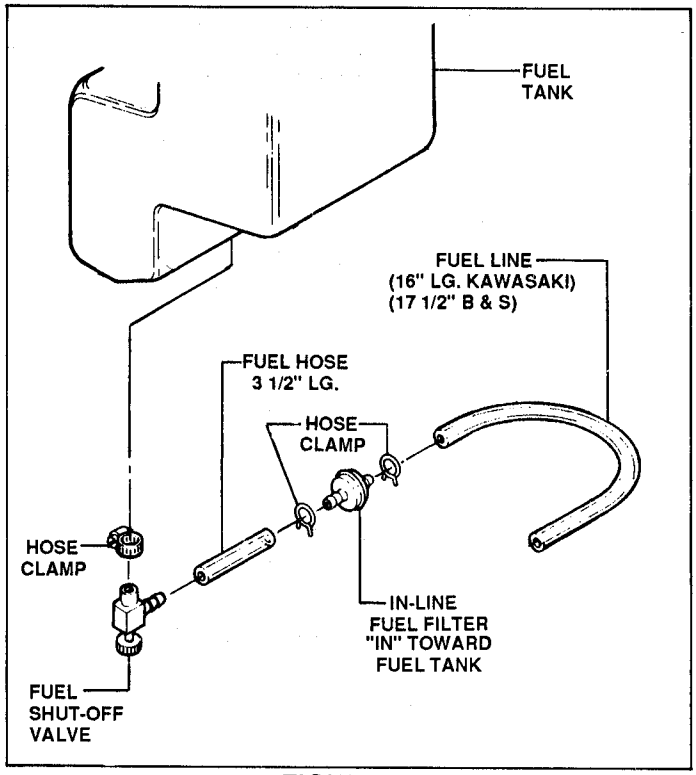

FIGURE 3

3. Install Fuel Tank Assembly to lower handle assembly. See Figure 4. Tighten Fuel Tank Bands securely.

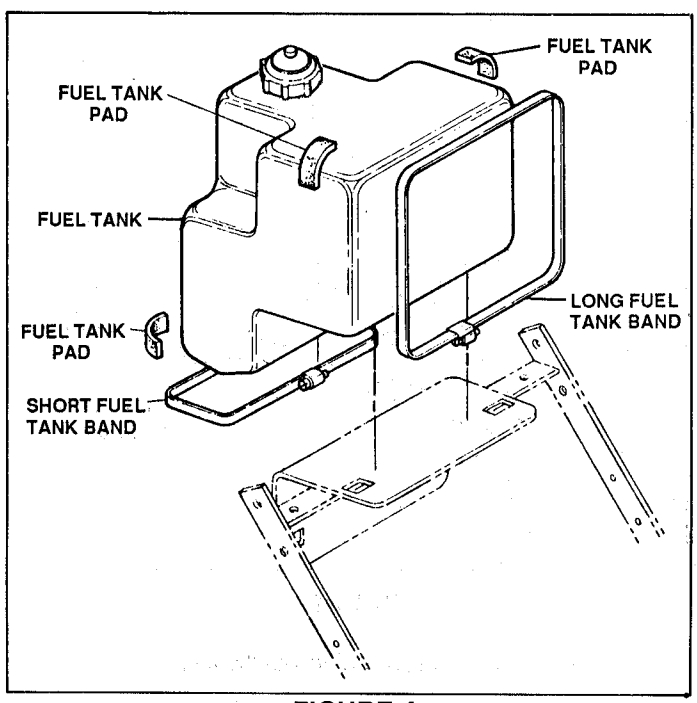

FIGURE 4

4. Attach Fuel Line Assembly to engine carburetor.

NOTE
MAKE CERTAIN THE IN-LINE FUEL FILTER IS INSTALLED WITH THE WORD "IN" TOWARD FUEL TANK.

C. MUFFLER (Briggs & Stratton)

NOTE: Muffler installation required only on models with Briggs engines.

1. Loosely preassemble the bracket and clamp to the muffler as shown in Figure 5. The bracket should move freely on the muffler.

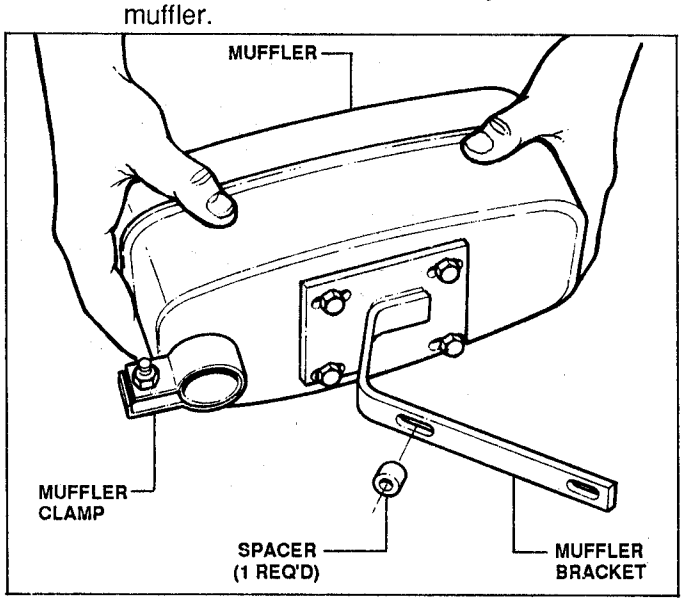

FIGURE 5

2. Slip the muffler over the engine outlet pipe, then connect the bracket to the engine using two 1/4" x 1 " grade 5 bolts and two 1/4" lock washers. See Figure 6.

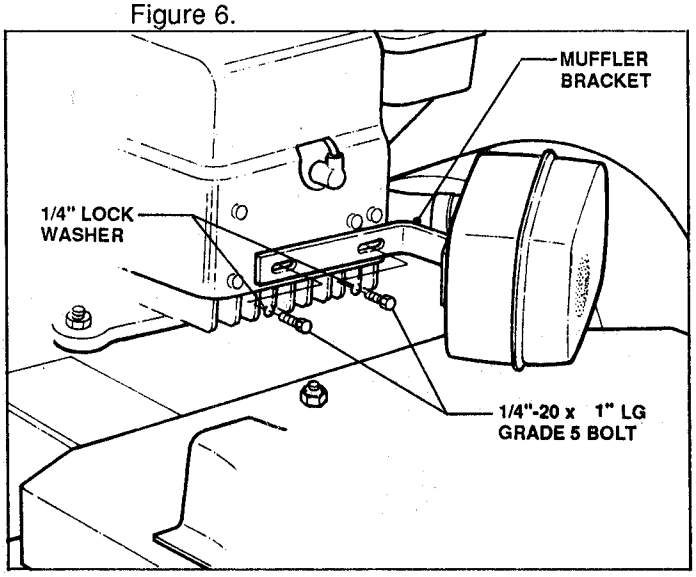

FIGURE 6

3. Tighten remaining hardware.

D. TOP HANDLE ASSEMBLY

1. **Install Top Handle Assembly to Lower Handle Assembly**
   (a) With hand grips resting on floor, align lower mounting holes of Top Handle Assembly with lower mounting holes in Lower Handle Assembly. See Figure 7.

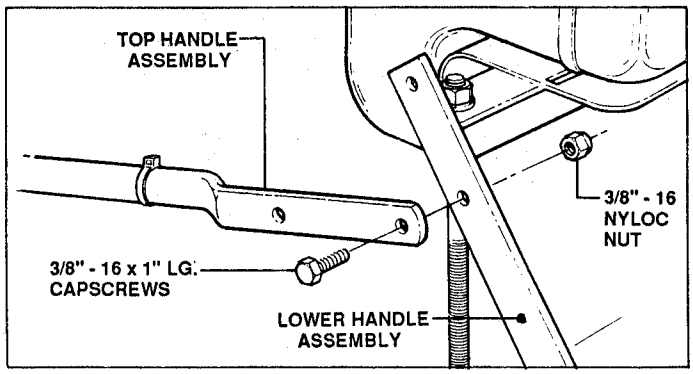

FIGURE 7

   (b) Install 3/8" - 16 x 1" LG. Hex Head Capscrews and 3/8" - 16 Nyloc Hex Nuts through lower mounting holes. Refer to Figure 7. Finger tighten.

   (c) Raise Top Handle Assembly to align the upper mounting holes. Install 3/8" - 16 x 1" LG. Hex Head Capscrews and 3/8" - 16 Nyloc Hex Nuts in either side. See Figure 8.

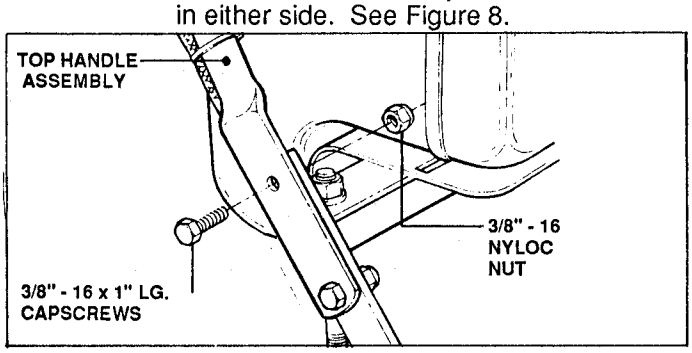

FIGURE 8

   (d) Tighten all Top Handle mounting bolts and nuts securely.

2. **Linkage Installation**
   (a) Install Traction Rod to Traction Bellcrank on either side. See Figure 9.

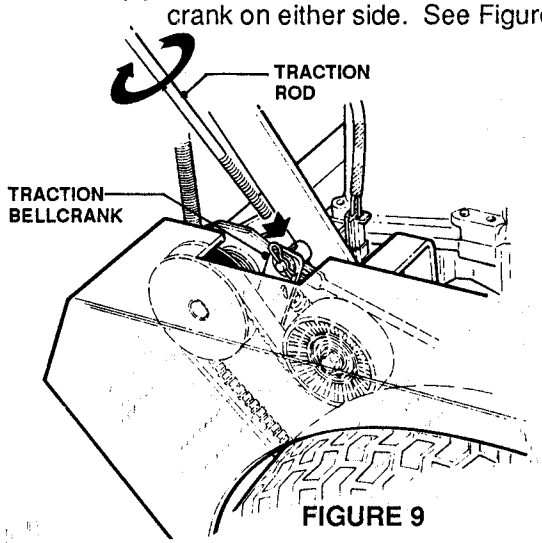

FIGURE 9

(b) Install Ground Speed Linkage to bellcrank on R.H. side. See Figure 10.

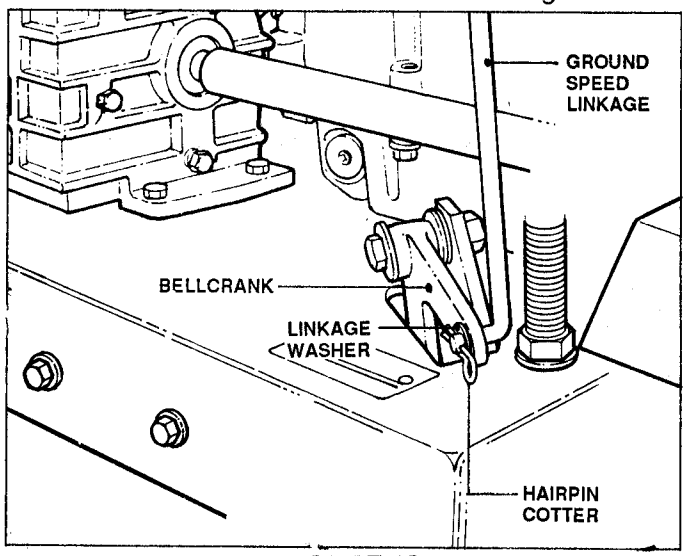

FIGURE 10

(c) Install Blade Control Linkage to Blade Control bellcrank on L.H. side. See Figure 11.

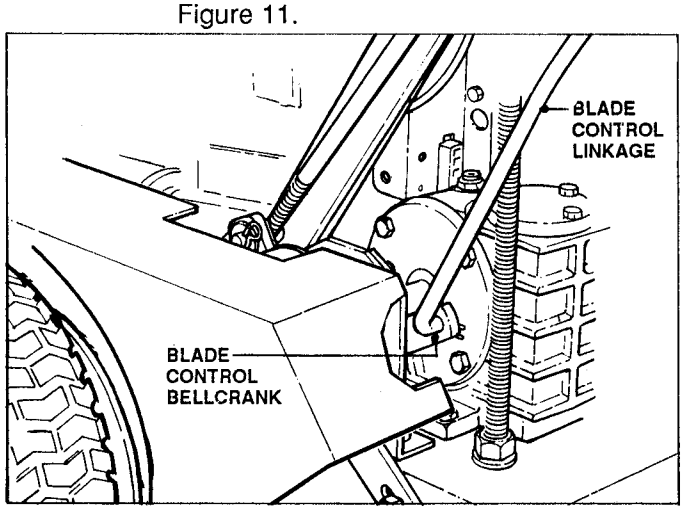

FIGURE 11

(d) Refer to Safety Instruction, Service & Operators Manual, Pages 15 thru 17 for proper adjustment procedures of linkage.

(e) Connect Wiring Harness together on R.H. side of Handle Assembly. See Figure 12.

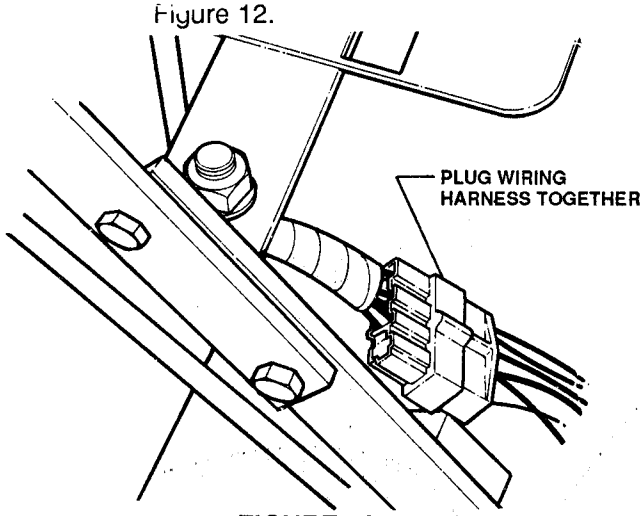

FIGURE 12

(f) Connect Throttle to engine.

(g) Connect Choke (Briggs & Stratton only) to engine carburetor.

E. BELT COVER (MOWING DECK)

1. Install Belt Cover to Mowing Deck using 5/16" I.D. flat washers and 5/16 - 18 Nyloc Hex Nuts. See Figure 13.

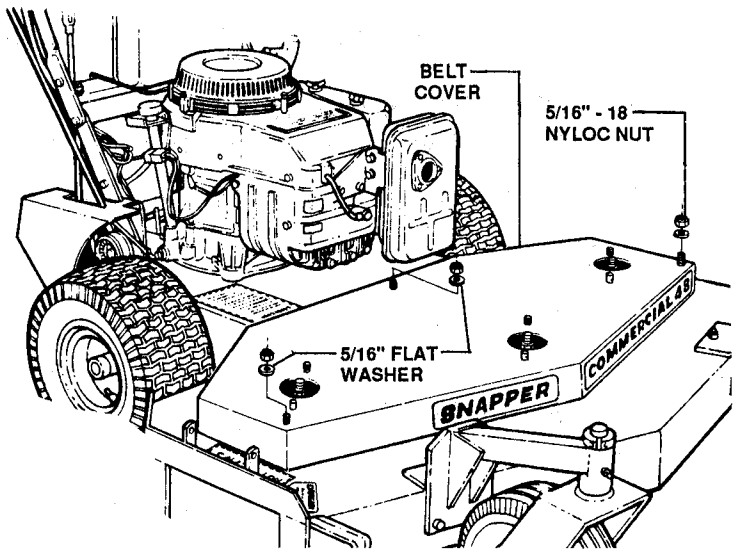

FIGURE 13

2. Install Spindle Covers onto Belt Cover using two (2) 5/16" I.D. flat washers, one (1) #2 hairpin cotter and one (1) 5/16" - 18 Nyloc Hex Nut for each Spindle Cover. See Figure 14.

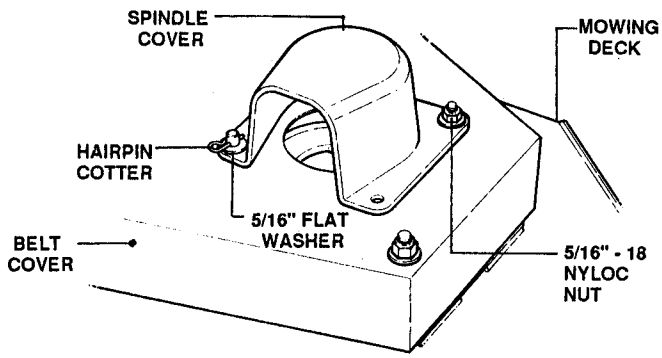

FIGURE 14

F. CHUTE DEFLECTOR

1. Install Chute Deflector to Mowing Deck using two (2) 5/16" - 18 x 1" LG. Hex Head Capscrews and two (2) 5/16" - 18 Nyloc Hex Nuts. See Figure 15.

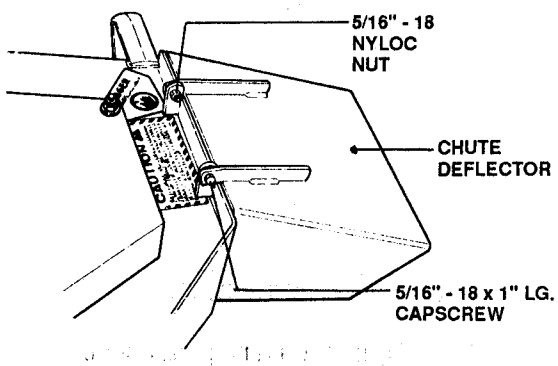

FIGURE 15

DEALER PRE-SALE CHECKLIST for SNAPPER

32", 36" & 48" COMMERCIAL MOWERS

The following must be accomplished prior to sale. Review this list with purchaser, check (✓) items as actually performed and sign below.

SET-UP (Details on pages 1-3 of this instruction)

DEMONSTRATION & INSTRUCTION

____PERSONALLY HANDED Operator's Manual & Mower Safety Booklet to purchaser.

____INSTRUCTED purchaser to read and follow instructions in Operator's Manual.

____DEMONSTRATED proper starting procedure and operation of mower to purchaser.

____INSTRUCTED purchaser how to service air cleaner, maintain oil level (4-cycle) or mix oil (2-cycle).

____ASSISTED purchaser in completing Product Registration Card.

DEALER'S RECORDS

Sale Date_____Model_____Serial No._____

Dealer's Name_____Signature_____

Address_____City_____State_____Zip _____

MOWER WILL BE USED COMMERCIALLY? YES____ NO____

Purchaser's Name_____Signature_____

Address_____City_____State_____Zip _____

IMPORTANT: This form is to be retained by the Dealer for future reference regarding Warranty, proof of purchase, traceability for product recall or service, etc.

SNAPPER POWER EQUIPMENT
McDonough, Georgia 30253
A Division of Fuqua Industries

#2-3524 (IR 12/88 Issue) Printed in U.S.A.